

## Replacement Burner Assembly

# Installation Instructions

For NORDYNE Models CMH, CMC, MG (--) or M1(G,M) (-) — Standing Pilot Gas or MM(-- ) & M1M(-) — Direct Ignition Gas Furnaces.

### **WARNING:**

The replacement burner assembly has been shipped with the smallest orifice for safety purposes. Use the orifice from the burner being removed or obtain a new one from your distributor. See the nameplate data on the furnace for the correct main burner orifice size. Be sure gas valve regulator is set for the correct supply gas used, either natural or LP. Follow gas conversion instructions as described on the lighting instruction label on the furnace or in the installation instructions.

Burner Installation: Replacement of the burner assembly must be performed by a qualified service technician, experienced in the proper installation of heating appliances. Some local codes require licensing of service technicians.

#### Remove Burner Assembly:

1. Turn off the gas supply and the electrical power to the furnace.
2. Disconnect the gas supply line from the gas valve.
3. Remove the electrical wires to the gas valve.
4. Remove the screws attaching the burner mounting plate to the air box.
5. Slowly pull the burner out of the furnace.
6. Remove the main gas orifice from the spud.

#### Install New Burner Assembly:

1. Screw the main gas orifice into replacement burner spud. **See furnace data plate for correct orifice size.**
2. Install the new burner to the air box using the screws removed earlier.
3. Connect the gas supply line and the electrical wires to the gas valve. Purge the gas supply line. Be sure the gas valve regulator is set for the correct gas supply, either natural gas or LP.
4. Follow the Lighting Instructions as described on the label in the furnace and/or in the Furnace Installation Instructions.