Installation Instructions

Downflow Adaptor

INTRODUCTION

The downflow adaptor kit is designed to support the indoor coil of our air handler in a downflow installation. **NOTE:** This kit must be installed *before* the air handler is mounted in the downflow configuration.

These instructions are primarily intended to assist qualified individuals experienced in the proper installation of this appliance. Some local codes require licensed installation/service personnel for this type of equipment. Read all instructions carefully before starting the installation.

INSTALLATION SEQUENCE

MARNING:

To avoid risk of electrical shock, personal injury, or death, disconnect electrical power to the unit before performing any maintenance or service. The unit may have more than one electric power supply.

- Remove top and bottom doors. Remove the coil by first removing the screw securing the tube close-off plate to the cabinet and then sliding the coil straight out of the unit. Reposition the air handler in the downflow position.
- 2. On **B** and **C** cabinet size replace the drainpan on the coil assembly with the drainpan furnished in the kit by removing the 4 (four) attachment screws.
- 3. Unfold and install the adaptor kit, using the screws provided, as shown in **Figure 1**. Holes for mounting the downflow adaptor kit are provided in the air handler.
- 4. Replace the indoor coil assembly and secure the tube close-off plate to the cabinet. (See Figure 1)
- Rotate the bottom door 180° from its original orientation.
 On B and C cabinet size modify the bottom door by cutting out the bottom left corner to accommodate the drain location of the new drainpan. The door trim

INSTALLER:
PLEASE LEAVE THESE INSTALLATION
INSTRUCTIONS WITH THE HOMEOWNER.

bracket in the kit can be used as a template. Replace the doors and attach the trim bracket.

The air handler is now ready to be installed. See the installation instructions included with the unit.

Part Number	Cabinet Size	Application
917342	Α	Downflow Only
917343A	В	Downflow Only
917344A	С	Downflow Only

Table 1. Application Matrix

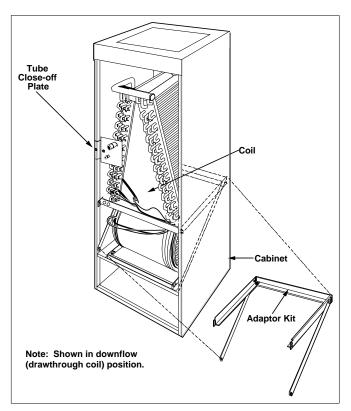


Figure 1. Location of Major Components



7080220 (Replaces 7078510)