

WIRING DIAGRAM

Convertible Packaged Air Conditioner

208/230 Volt


Three Phase

60Hz

NOTES:

1. Disconnect all power before servicing.
2. For supply connections use copper conductors only.
3. Not suitable on systems that exceed 150 V to ground.
4. If any of the original wire as supplied with the furnace must be replaced, it must be replaced with wiring material having a temperature rating of at least 105°C.
5. For supply wire ampacities and overcurrent protection, see unit rating plate.

1. Couper le courant avant de faire letretien.
2. Employez uniquement des conducteurs en cuivre.
3. Ne convient pas aux installations de plus de 150 V a la terre.

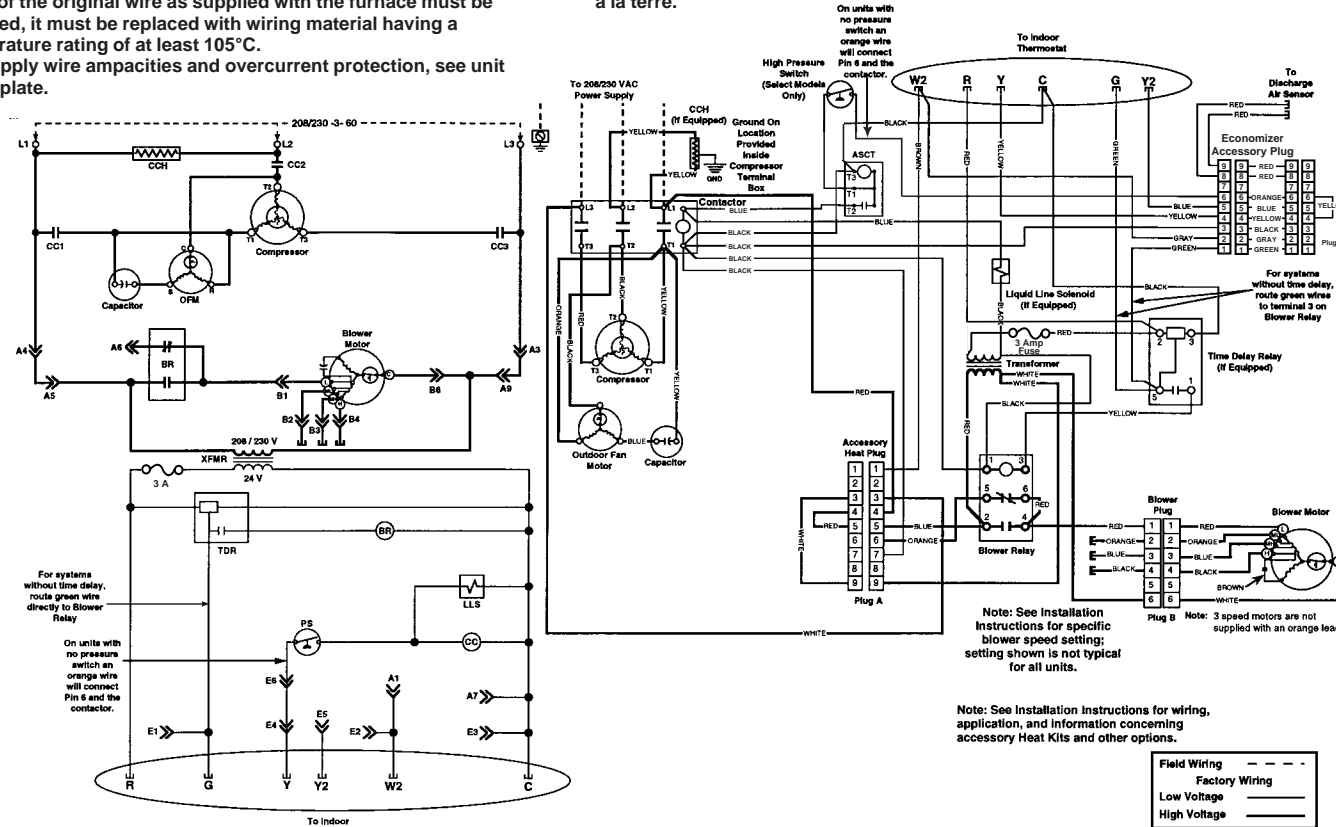

3A - 3 AMP FUSE
 ASCT - ANTI SHORT CYCLE TIMER
 BR - BLOWER RELAY
 CC - COMPRESSOR CONTACTOR
 CCH - CRANKCASE HEATER (IF EQUIPPED)
 LLS - LIQUID LINE SOLENOID (IF EQUIPPED)
 TDR - TIME DELAY RELAY (SELECT MODELS)
 PS - PRESSURE SWITCH (SELECT MODELS)

A1 - INDICATES PLUG CONNECTION LETTER INDICATES WHICH PLUG 1 - 6 INDICATES PIN NUMBER.



Note: See Installation Instructions for specific blower speed setting; setting shown is not typical for all units.

Note: See Installation Instructions for wiring, application, and information concerning accessory Heat Kits and other options.

Field Wiring	---
Factory Wiring	—
Low Voltage	—
High Voltage	—

710333A (Replaces 7103330)