


WIRING DIAGRAM

Small Packaged Heat Pump - Single Phase

- NOTES: 1. Disconnect all power before servicing. 2. For supply connections use copper conductors only. 3. Not suitable on systems that exceed 150 V to ground. 4. For replacement wires use conductors suitable for 105° C. 5. On models w/no pressure switch 15-YE(28) connects "Y" & "T1" on Defrost Board.
1. Couper le courant avant de faire letretien. 2. Employez uniquement des conducteurs en cuivre 3. Ne convient pas aux installations de plus de 150 V a la terre.

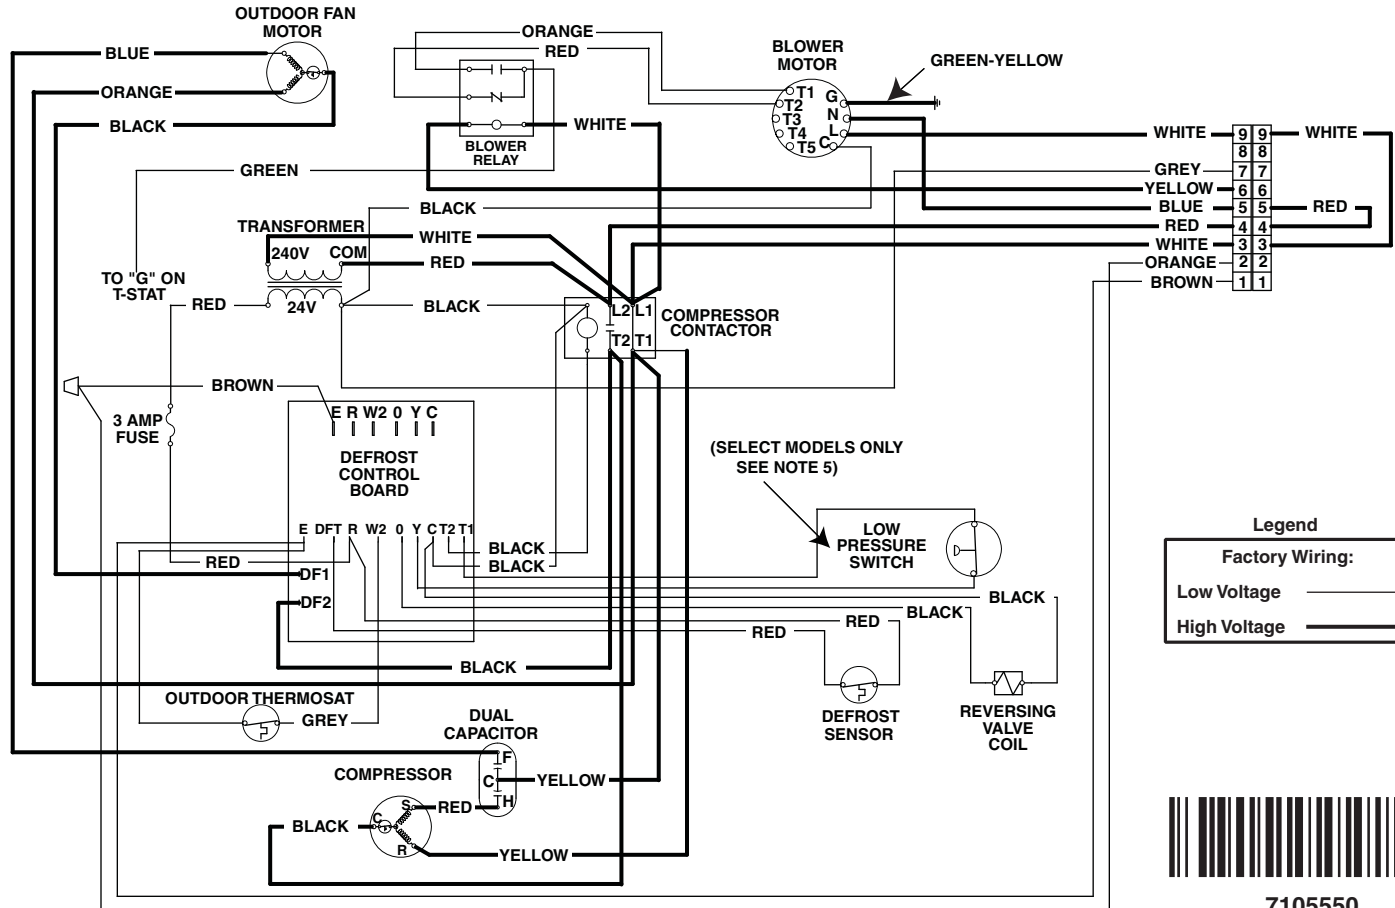

7105550